EN Contact us
DE Kontaktieren Sie uns
FR Contactez-nous
IT Contattaci
ES Contacte con nosotros
NL Neem contact op
SV Kontakta oss
NO Kontakt oss
DA Kontakt os
FI Ota yhteyttä
PL Kontakt
CS Kontaktujte nás
EL Επικοινωνήστε μαζί μας
HU Lépjen kapcsolatba velünk
RO Contactați-ne
PT Contacte-nos

iroha.com.support

iroha SVR
SMART RING

USER MANUAL
DIN EN 18 19 20 21 22 23 24 25 26 27 28 29

Please read this Manual before use
and store it for future or other reference.

Included Parts

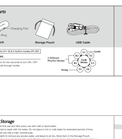

* Actual size varies by UK / EU Sizing Guide (US Sizing Guide is different)
Vibration Modes
1 Standard Vibration Mode
2 Intense Vibration Mode

How to Use

Attach to base of penis to enhance stimulations

Rotate for fingers or create stimulating hands

Squeeze for clitoral stimulation

Use only underneath the ring

Warning: When wearing the SVR

The SVR uses a soft silicone, but tightness of the skin is suggested to the user. Please ensure the ring is not too tight. Please ensure the ring is clean, dry, unscented, and unused in external preferences. The silicone material will absorb and retain scents and oils over time. Avoid contact with oils. If needed, wipe. If you feel the ring is too tight, please remove it immediately. Please ensure the ring is clean, dry, unscented, and unused in external preferences.

How to Charge

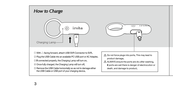

* The TESCAN SVR's USB Charger is also compatible with the iroha SVR.

Please ensure USB is compatible with your AC Wall Plug Adapter.

1. Put the ring on your finger to measure your size.
2. Choose the ring size that fits you the most.
3. Put the ring in the charging dock and place it on the USB charging dock as shown in the picture.
4. Connect the USB cable to the charging dock.
5. Connect the USB cable to an adapter.
6. Plug the adapter into a power outlet.
7. The LED indicator will turn red when charging.
8. The LED indicator will turn green when fully charged.

Cleaning & Storage

- Clean under lukewarm water and use some soap with mild or harsh water.
- Dry with a soft towel or cloth. Please ensure the ring is dry before the next time of use.
- Please store under dry and cool conditions.
- Please store in the storage pouch provided when not in use. Do not store in the Storage Pouch.
- Do not clean with cleansers, alcohol, liquid, acetic-based cleaners, or corrosive substances such as bleach or hydrogen peroxide. Avoid contact with oils. If needed, wipe.

Disposal

- Please dispose of through a Chemical Electrical and Electronic Equipment (WEEE).
- Please dispose of the battery through a battery collection point. Please remove the battery before disposal.
- Please do not dispose of the battery in household waste. Please contact your local waste disposal authority.

Troubleshooting

The product won't turn on / The product won't stay on / The vibrations is weak

- Please charge the product for at least 2 hours.
- Please check if the product is charged properly. The charge will not work on a USB charging port.
- Please try to clean the product if you have not. Use soap, if necessary. Please clean every time to ensure best use of the product.

The product won't charge / Charging is taking too long

- Please check if the product is charged properly. The charge will not work on a USB charging port.
- Please try to clean the product if you have not. Use soap, if necessary. Please clean every time to ensure best use of the product.

The product won't stop charging

- Please check if the product is charged properly. The charge will not work on a USB charging port.
- Please try to clean the product if you have not. Use soap, if necessary. Please clean every time to ensure best use of the product.

Caution

- Keep out of reach of children.
- Do not use if the product is damaged, cracked, chipped or broken in any way. Discontinue use if irritation occurs